





BCS0261 V1.2

Quick Guide

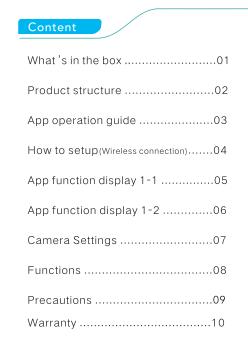

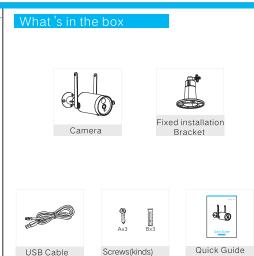

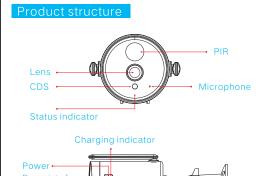

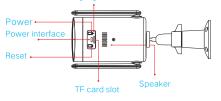

■ Status indicator

have a preview in App

■ Two way Audio

The red indicator flickers slowly :wait the user to add the device The red indicator flickers quickly :connecting the WIFI The red indicator normally on :no internet accessed The blue indicator normally on :the camera is online

The camera will be in a sleep mode to save power, you can

You can see and talk with the vistor in you App from the camera

You can set a low-battery alarm threshold in your phone App,

the threshold is set to a minimum of 10% and a maximum

of 50%, When the battery power of the camera is lower than the set threshold, the App will have a reminder.

Using TF card or enable the Cloud-Storage Service, to keep recording for every moment

■ Download the APP

Scan the below QR code or Search "Cloudedge" on Google play / App store to download the app





You can sign up an account by email, Click "Sign up" then select the country or region you are located and complete your register



Log in

Sign Up


router, then connect the phone to wifi.

Log in Cloudedge APP, click and select "Battery Camera"
Select 2.4GHZ wifi SSID and enter your password, tap "Next".
Scan the QR code in front of the camera, after the device recognizes the QR code, it will sound "bugu" then tap "hear Tone"

Press and hold the power button for 5 seconds to turn on the camera ,if can not power on , please plug in DC5V 1A/2A phone adaptor to charge 15min firstly ,ensure the

indicator slowly blinking in red (if not blinking red, press the reset button 5 seconds to reset the camera)


up (Wireless connection) 1.Place the camera and phone within 30cm-100cm of the

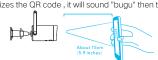


 Camera will start connecting wifi and skip to the page where the connection is successful , you can edit the camera name then click "Done" to open the camera in my device list and you can watch the live video






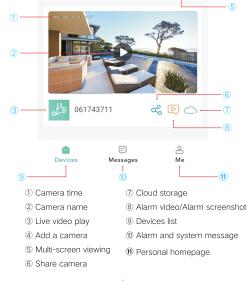

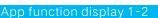



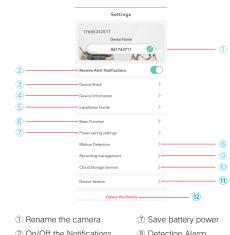

② On/Off the Notifications ® Detection Alarm 3 Share the device 9 TF card information Device Information 10 Cloud Storage Service

⑤ Installation guide

 fu unction
On/Off Rotate view, Night Vision,
Alarm settings, Power Management 12 Delete the camera

11 Version



Daytime



Important Notes for Reducing False Alarms

- Do not install the camera facing any objects with bright
- lights,including sunshine,bright lamp lights,etc. Do not place the camera too close to a place where there
- frequently moving vehicles, Based on numerous tests.
- Do not install the camera facing the mirror, Keep the camera
- The recommended distance between the camera and vehicles is 15 meters. Stay away from the outlets, including air conditioner vents, humidifer outlets.
- the heat transfer vents of the projectors, etc. away from any wireless devices, including Wi-Fi routers and phones, in order to avoid wireless interference.

Troubleshooting & suggestion		
NO.	Description	Solution and operation
1	Unable To Connect	Check your wifi name and password Ensure your wifi is 2.4G,not support 5G Ensure your camera and phone close to router
2	Reset	Press and hold on the reset button for 5 seconds Hear "bugu"sound Red light turns to slow blinking
3	Change to new network	Press reset key to factory default settings Re-connection
4	Failed to add device	Please Enable Cloudedge App cellular data on mobile settings
5	No alarm push	Please Enable Cloudedge App notification on mobile settings
6	No alarm video record	Please Insert TF Card

Warranty

Dear users,

Thank you for using our products. please read the following terms carefully before installing the product. 1. The warranty period is one year since the date of purchasing. Within the warranty period, the trouble caused by the quality problem of the product in the case of normal use will be maintained by our company free

- 2. The following cases are beyond the warranty range:
- Any faults or defects caused by improper operating environment or operation.
- Any faults or defects caused by improper installation, misuse, unauthorized maintenance, revision, accident, force majorevent or other external factors.
- Any faults or defects caused by using the product, software or component of the third party.
- The product has been beyond the warranty period.
- The product barcode cannot be identified or is
- The faults or damage not arising from the design, technology,

manufacturing and quality problems of the product.

