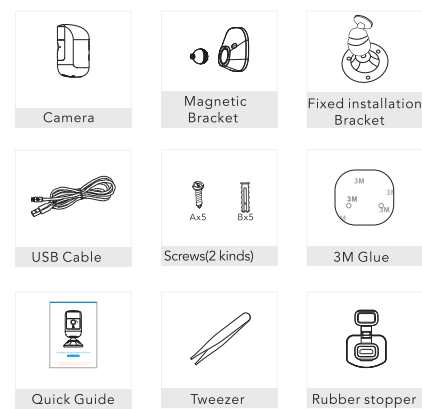BCS0281 V1.0

Intelligent Battery Powered Camera
User manual

Note: The camera picture in the user manual for reference only , please take the physical object as the standard.
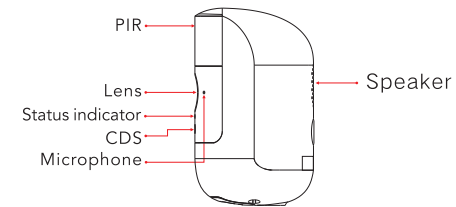
Table of contents

Packing list

Camera

Magnetic Bracket

Fixed installation Bracket

USB Cable

Screws(2 kinds) Ax5 Bx5

3M Glue

Quick Guide

Tweezer

Rubber stopper

Product structure

PIR

Lens

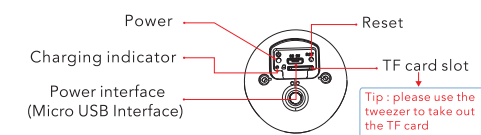Status indicator

CDS

Microphone

Speaker

Content	Description

The red indicator flickers slowly :wait the user to add the device

The red indicator flickers quickly : connecting the WIFI

The red indicator normally on :no internet accessed

The blue indicator normally on :the camera is online

Product structure

Power

Charging indicator

Power interface (Micro USB Interface)

Reset

TF card slot

Tip : please use the tweezer to take out the TF card

Content	Description

Power interface : DC 5V±10%

Power : Long press the power button for about 3-5s to open/close the camera.

Reset : Long press the reset button for about 5s to restore the factory default.

TF card slot : Support TF card local storage (Maximum support 128G) , please format the TF card in the "TuyaSmart"APP for the first time using.

Charging indicator : The red light is normally on, the camera is charging. The blue light is normally on, the charging is finished.
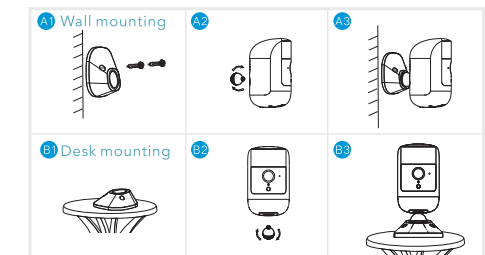
Installation

■ Installation of rubber plug

Step ❶ Step ❷ Step ❸
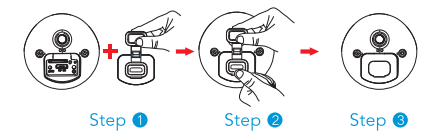
Tip: if the rubber plug is not installed, the water-proof will be affected.

■ Wall/Desk mounting

A) Wall mounting   A2)   A3)

B) Desk mounting   B2)   B3)

Tip : Please install the camera in the suitable location where the WIFI network is good , otherwise the device maybe will not working properly !

Download the APP

Scan the bellow QR code or search the "TuyaSmart" in the APP store or google play , then download and install the APP.

Scan and install TuyaSmart App

■ User register and Login

(1) Register : Select your country to register an account with your email.

(2) Log in : Select your country, enter the existing account and password to log in
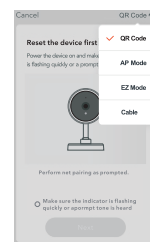
tuya

Register

Log in with Existing Account
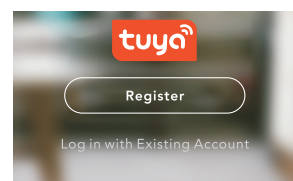
Add the camera

Preparation

Make sure the wifi for phone connection is 2.4G and in the good network condition (5GHz not supported) ,wait for the red light of the device flickers slowly(if the red light of the device is not flickering slowly, long press the reset button for about3- 5s until the camera emits a "BUGU" sound , wait for the device to restart then add the camera)Open the "tuya smart " APP , Click "Add Device"or "+" icon in the upper right corner to add the camera ,select "Security Sensors"，then click "Smart Camera" and enter to the camera list screen.

一、Add the device by "QR code "

Select "QR code ",click "Next", input the wifi password the phone connected and click "Next", make the QR code generated by the APP be facing the camera lens about 15-20cm , wait for the device send out "BUGU " sound , click "I Hear a Prompt ",then APP is automatically searching the device to add at the moment.
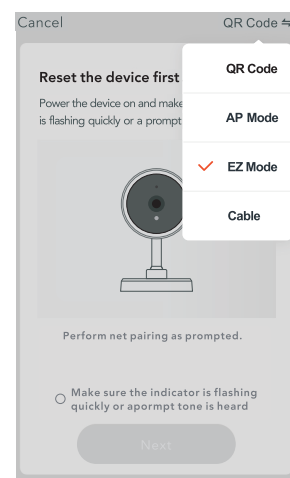
Reset the device first

Power the device on and make is flashing quickly or a prompt

QR Code

AP Mode

EZ Mode

Cable

Perform net pairing as prompted.

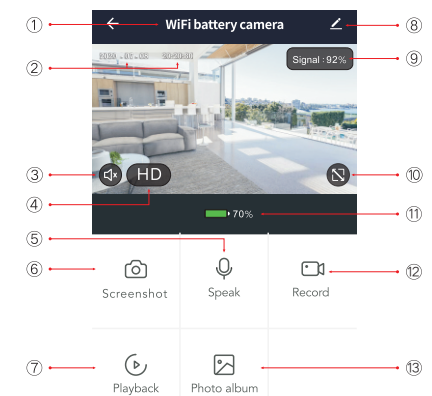Make sure the indicator is flashing quickly or apormpt tone is heard

Add the camera

二、EZ Mode to add the device

Select "EZ Mode" ,click "Next", input the wifi password the phone connected and click "Next", then APP is auto-matically searching the device to add at the moment., wait for the device send out "BUGU " sound, then the configuration was completed.

Cancel   QR Code

Reset the device first

Power the device on and make is flashing quickly or a prompt

QR Code

AP Mode

✓ EZ Mode

Cable

Function introduction

WiFi battery camera

Signal : 92%

HD

70%

Screenshot   Speak   Record

Playback   Photo album

① Camera name
② Time of the camera
③ Voice of the device
④ Definition of the Picture
⑤ Speak
⑥ Screenshot
⑦ Playback
⑧ Settings
⑨ Signal
⑩ Full screen preview
⑪ Battery capacity
⑫ Record
⑬ Photo album

FAQ

❶ Q: Failed to add during network configuration?
A: Please make sure your phone is connected to a router in the 2.4GHz band, and make sure that the Wi-Fi password is correct.

❷ Q: After scan adding is still unsuccessful?
A: Restart the device or power off the device after scan adding is still unsuccessful, and then try to add it again.

❸ Q: The device cannot preview normally?
A: Please check if the network signal is too weak, please put the camera close to the router, if still cannot preview, reset the camera and add it again.

❹ Q: After resetting the device, why is the camera still in the device list?
A: Resetting the device only to reset the camera's network configuration, but cannot change the configuration on the APP, to delete the camera, you must log in the APP to delete.

❺ Q: How to switch the camera network to another router?
A: First remove and reset the device on the APP, and then configure the network for the device again through the APP.

❻ Q: Why does the device can not recognize the TF card?
A: Please insert and remove the TF card after power off, please check if the TF card is working normally and whether it is in FAT32 format, when the mobile phone or the device is working in unstable network, the APP also will prompt that the TF card cannot be recognized.

Warranty

Dear users,

Thank you for using our products. please read the following terms carefully before installing the product

1.The warranty period is one year since the date of purcha-sing.Within the warranty period, the trouble caused by the quality problem of the product in the case of normal use will be maintained by our company free of cost.

2.The following cases are beyond the warranty range:

● Any faults or defects caused by improper operating environment or operation.

● Any faults or defects caused by improper installation, misuse,unauthorized maintenance, revision, accident, force majorevent or other external factors.

● Any faults or defects caused by using the product, software or component of the third party.

● The product has been beyond the warranty period.

● The product barcode cannot be identified or is mis-matched.

● The faults or damage not arising from the design, technology,manufacturing and quality problems of the product.